 




# Diaphragm nozzle holder for air-assisted sprayers, Assembly accessories, Relocation kit

 


## Diaphragm nozzle holder

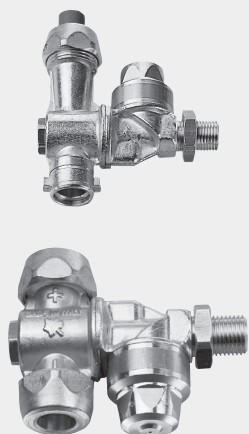


| Designation  | Material | Order No.                 |
|--|----------|---------------------------|
| Bayonet diaphragm nozzle holder<br>incl. threaded cap and bayonet cap<br>Opening pressure: 0.7 bar<br>Closing pressure: 0.7 bar<br>Max. working pressure: 25 bar |          |                           |
| G 1/4 male   | Brass    | <b>Z.TRA.EGE.RK.OM.B</b>  |
| Diaphragm nozzle holder<br>incl. 2 threaded caps<br>Opening pressure: 1.1 bar<br>Closing pressure: 0.9 bar<br>Max. working pressure: 40 bar                      |          |                           |
| G 1/4 male   | Brass    | <b>095.016.30.09.61.0</b> |
| G 1/4 female   | Brass    | <b>095.016.30.09.62.0</b> |

## Assembly accessories

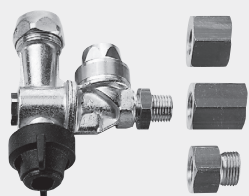

| Designation  | Material | Order No.                 |
|--|----------|---------------------------|
| Reduction socket<br>M 18 x 1,5 female / G 1/4 female | Brass    | <b>095.016.30.12.80.0</b> |
| Reduction socket<br>G 3/8 female / G 1/4 female      | Brass    | <b>095.019.30.00.23</b>   |
| Reduction coupling<br>G 3/8 male / G 1/4 female      | Brass    | <b>065.221.30</b>         |

## Relocation kit

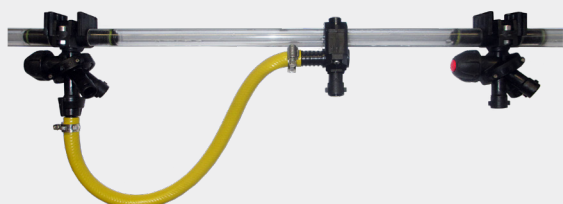 

| Description  | Order No.                 |
|--|---------------------------|
| <b>Variable row adaptation<br/>(e.g. corn 0.75 m row spacing)<br/>with relocation kit</b><br>Installation on wet boom<br>1/2" (20–22 mm)<br>3/4" (25–28 mm) on request | <b>092.174.00.00.00.0</b> |

## Good to know

You can find further information and our assembly instructions here:  
[www.lechler.com/de-en/support](http://www.lechler.com/de-en/support)

